Quick Start Guide for Coziny





CONTROL PANEL



Power/ Mute/ Unlock



Battery Indicator



Static Mode



Weight Setting (kg)



Cycle Time



Pressure Monitoring LED (IPS)



Low Pressure Alert LED

OPERATING INSTRUCTION



Power/Mute/Unlock

This button has three functions

- Press and hold for 3 seconds to power on or off the power unit
 - When the power unit is turned on, the green LED will illuminate
- Mute Function Press to turn off the audible alarm
 - Once muted manually, the audible alarm will not restart
- * The caregivers will be notified only through the visual LED until the problem is resolved
- **6 Control Panel Lock** The panel will auto-lock when there is no operation for 3 minutes
 - Press and hold for 3 seconds to unlock the control panel

Activate the Power unit

- Press for 3 seconds to activate the power unit and start mattress inflation
- Adjust weight and mode settings during mattress inflation
- If no setting are made, Dynamic mode will auto-activate after inflation
- * Initial Dynamic setup: 10 minutes / 0.5kg
- * Subsequent activations retain previous shutdown setting



Weight Setting(kg)

- Press (±) to adjust the weight setting of patient
- Coziny Plus can be paired with three types of mattresses
 - Coziny 100 mattress: Weight setting from 0.5kg to 3.5kg
 - Coziny 200 mattress: Weight setting from 4kg to 11kg
 - Coziny 300 mattress: Weight setting from 11kg to 25kg * The weight setting scale is only indicative

Adjust the weight setting for patient comfort when mattress is too soft or firm



Quick Start Guide for Coziny





Static Mode

Static Mode = Immersion Therapy Simulation in which all air cells maintain constant pressure support and maximize patient's contact area to redistribute pressure

• Press to activate Static Mode

When activated, the green LED will light up and cycle time will display 0



Cycle Time for Dynamic Mode

Air cells continuously alternate in an A-B-A-B pattern to relief pressure and increase blood flow of the patient's tissue

- Press to select Cycle Time for Dynamic Mode
- Three cycle times for dynamic mode can be selected: 10, 15, and 20 minutes



Low Pressure Alert LED

- with yellow LED when the mattress has low pressure
- Audible beeping and visual flashing alarms will activate
- Press to mute the audible alarm. LED will remain on until the issue is resolved
- If insufficient pressure persists for 15 minutes, the power unit will shut down automatically



Pressure Monitoring LED (IPS)

- IPS, the intelligent pressure sensing technology to monitor mattress pressure 24 hours to ensure optimal pressure and maximum relief
- The yellow LED indicates the system is actively monitoring the mattress pressure



Battery Indicator -----

- Indicates the battery level and charging status
- IIII indicates low power and require 6.5 to 8 charging hours to full
- The battery failure will be triggered when the yellow LED flashes five times, and following the system will shut down automatically
- Please note that the battery is not user-replaceable. Kindly seek assistance from your authorized local distributor

| PROBLEM | CONTROL PROCEDURE | POSSIBLE SOLUTION |
|--|---|--|
| The mattress is not inflating even though the power nit is working | Verify that air flows freely across the tubes and the mattress manifold. Check for any cuts, blockages, or breaks in the air cells or air hoses | If the tubes or manifold are kinked or twisted, it may be necessary to reposition them. In the event of cuts or rips, replace the air cells or air hoses |
| | © Confirm that the quick coupling is properly connected to the air outlets of the power unit | Make sure the quick coupling is firmly connected |
| The patient sinks into the mattress | A Check the weight setting on the power unit | Increase the patient's weight setting until the correct support pressure is achieved |
| | Check for any abnormal air loss from the mattress | 3 Replace the components that are abnormally losing air with an authentic replacement part |
| | Check the air filter | Clean or replace the air filter |
| The power unit cannot power on | Check the battery level of the power unit by pressing for 3 seconds | Orange LED indicates low power, connect the power adapter to the power unit and charge for 8hours. |
| | © The power unit is not responding to the control procedures listed above | 3 Contact the authorized distributor for technical service |

